


# 2400 ELECTROMAGNETIC DOOR HOLDER, FLUSH WALL MOUNT

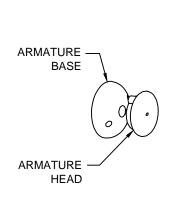

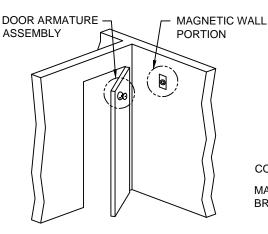


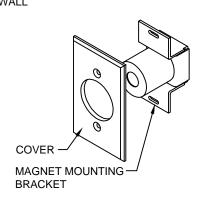





2400 MAGNETIC WALL PORTION

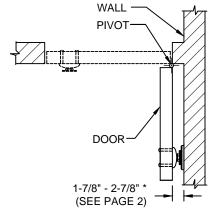


## **ELECTRICAL DATA:**


THIS PRODUCT IS AN ELECTROMAGNETIC HOLDING DEVICE, INTENDED FOR USE IN FIRE DOOR APPLICATIONS, BUT CAN BE USED FOR OTHER MAGNETIC APPLICATIONS. WIRE INTO PROPER TERMINALS AS NOTED BELOW:

(-)


SERIES	VOLTAGE	DC/mA	DC/VA	AC/mA	AC/VA	TERMINALS
2400	12 DC	60	.72			Com & 12 v
	24 AC/DC	30	.72	30	.72	Com & 24 v
	120 AC			30	3.60	Com & 120 v

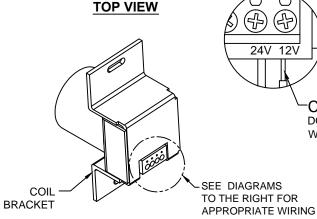




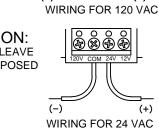

(+)

 

 

SCREW DETAIL									
	QTY	SCREW							
MAGNETIC WALL PORTION	2	6-32 x 1" OVAL HEAD MACHINE SCREW							
MAGNETIC COVER	2	6-32 x 1" FLAT HEAD MACHINE SCREW							
DOOD ADMATURE	_	10-32 x 1" PAN HEAD MACHINE SCREW							
DOOR ARMATURE	2	10-32 x 1-1/4" SNB							

® www.abhmfg.com

E-mail: abhinfo@abhmfg.com Architectural Builders Hardware Mfg., Inc. 1222 Ardmore Ave., Itasca, IL 60143 630.875.9900; FAX 800.9FAXABH (932.9224)

ABH is a minority owned and operated manufacturing company.

2400-1-04.DWG

© 2015 ABH Mfg., Inc. printed in USA

PAGE 1 OF 2 **REVISED 07-09-15** 


## 2400 ELECTROMAGNETIC DOOR HOLDER, FLUSH WALL MOUNT
 
### WALL PORTION INSTALLATION:

- 1. Measure distance from pivot centerline to wall (Dim. "A").
- 2. Determine door width (Dim. "B").
- 3. Use table below to locate magnet box on wall (Dim. "C").
  - a. Example : Dim. "A" = 10" Dim. "B" = 42"Result Dim. "C" = 38-1/2".
  - b. If Dim. "A" or Dim. "B" Falls between dimensions listed in the table below, allow for difference.

Example: Dim. "A"= 7" Dim. "B" = 36" Estimated Dim."C" = 32-15/16"

c. If Dim. "A" and Dim. "B" intersect in the shaded area, DO NOT INSTALL magnet box. The degree of door opening will not allow for proper alignment between armature and wall magnet.



- 5. Check degree of door opening shown in table and coordinate with door closer and other door hardware.
- 6. Total projection of door hardware must not be more than 2-7/8" on the pull side of door. If greater, you will need to use additional extensions, sold separately.

		DIM. "B" (DOOR WIDTH)																				
Dim. "A"	28		30		32		34		36		38		40		42		44		46		48	
A	Dim "C"	Deg	Dim "C"	Deg	Dim "C"	Deg	Dim "C"	Deg	Dim "C"	Deg	Dim "C"	Deg	Dim "C"	Deg	Dim "C"	Deg	Dim "C"	Deg	Dim "C"	Deg	Dim "C"	Deg
2	25-3/8	90°	27-3/8	90°	29-3/8	90°	31-3/8	90°	33-3/8	90°	35-3/8	90°	37-1/4	90°	39-3/8	90°	41-3/8	90°	43-3/8	90°	45-3/8	90°
4	25-1/4	95°	27-1/4	94°	29-1/4	94°	31-1/4	94°	33-1/4	94°	35-1/4	93°	37-3/8	93°	39-3/8	93°	41-3/8	93°	43-3/8	93°	45-3/8	93°
6	25	99°	27	99°	29-1/8	98°	31-1/8	98°	33-1/8	97°	35-1/8	97°	37-1/8	96°	39-1/8	96°	41-1/8	96°	43-1/8	95°	45-1/8	95°
8	24-5/8	104°	26-5/8	103°	28-3/4	102°	30-3/4	101°	32-3/4	101°	34-7/8	100°	36-7/8	99°	38-7/8	99°	40-7/8	99°	43	98°	45	98°
10	24	109°	26-1/8	107°	28-1/4	106°	30-1/4	105°	32-3/8	104°	34-3/8	103°	36-1/2	103°	38-1/2	102°	40-5/8	101°	42-5/8	101°	44-5/8	100°
12	23-1/4	114°	25-3/8	112°	27-5/8	110°	29-3/4	109°	31-3/4	108°	33-7/8	107°	36	106°	38	105°	40-1/8	104°	42-1/8	103°	44-1/4	103°
14	22-1/4	119°	24-1/2	116°	26-3/4	114°	28-7/8	113°	31-1/8	111°	33-1/4	110°	35-3/8	109°	37-1/2	108°	39-1/2	107°	41-5/8	106°	43-3/4	105°
16			23-1/2	121°	25-3/4	119°	28	117°	30-1/4	115°	32-3/8	114°	34-5/8	112°	36-3/4	111°	38-7/8	110°	41	109°	43-1/8	108°
18					24-1/2	123°	26-7/8	121°	29-1/4	119°	31-1/2	117°	33-3/4	116°	35-7/8	114°	38-1/8	113°	40-1/4	112°	42-3/8	111°
20					_				28	123°	30-3/8	121°	32-5/8	119°	35	117°	37-1/4	116°	39-3/8	115°	41-5/8	114°
22													31-1/2	123°	33-7/8	121°	36-1/8	119°	38-3/8	118°	40-5/8	116°
24																	35	122°	37-1/4	121°	39-5/8	119°

- 7. From corner of wall, measure the appropriate Dim. "C" determined in step 3.
- 8. Proper electrical wire routing must be done before installing electrical box.
- 9. The electrical box should be installed with reinforcement to withstand a minimum 50 lb. pull (not provided with unit).

IMPORTANT: a. Check that power voltage equals one of the voltages labeled on back of magnet.


b. Consult " ELECTRICAL DATA" on page 1.


### **DOOR ARMATURE INSTALLATION:**

- 1. Place and center the door armature on the surface of the magnet with the two holes of the base aligned horizontally.
- 2. Gently close the door and adjust the angle of the door armature so the base lays flat against the door.
- 3. While keeping slight pressure on the door, mark location of door armature through the two base holes.
- 4. Drill through the door where the two marks are located with 5/16" drill. Fasten armature with the (2)10-32 machine screws & sex bolts provided.

**NOTE:** 1. All dimensions are provided in inches, unless noted otherwise.

2. Additional extensions can be ordered separately to increase the door armature projection: 3/8", 1/2", 3/4", 1", 2" 4" or 6".

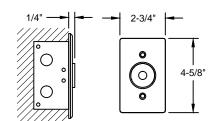

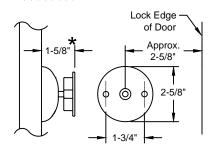

<del>--</del> 1" <del>---</del> ★ For 2-5/8" Door Projection, use 1" Extension provided complimentary 1" Extension

В

Pivot Centerline

Magnet Box

Centerline

2400-2-04 DWG

1111111

ABH is a minority owned and operated manufacturing company.

(c)2015 ABH Mfg., Inc. printed in USA

PAGE 2 OF 2

E-mail: abhinfo@abhmfg.com Architectural Builders Hardware Mfg., Inc. 1222 Ardmore Ave., Itasca, IL 60143 630.875.9900; FAX 800.9FAXABH (932.9224)

**REVISED 07-09-15**